 


Millennium Expert/Enterprise

 
Technical Bulletin

Title: Configuring a Periodic Time Download in Millennium Expert/Enterprise


Contents: Millennium can be configured to perform periodic time downloads. It means that the time will be automatically downloaded to all of the controllers after each specified period of time (defined as minutes). Follow the next steps to set up a periodic time download:

1. Stop Millennium Enterprise/Expert on the server. If you are running Millennium as application then just close the program. If you are running Millennium as a service then go to **Start -> Control Panel -> Administrative Tools -> Services**. Find the Millennium service and **right click -> Stop**.
2. Make sure that the DC96 program was closed. Start the task manager and click the  button. Make sure that DC96.EXE is not in the list.

If it is in the list, then select this line and click the 'End Process' button:

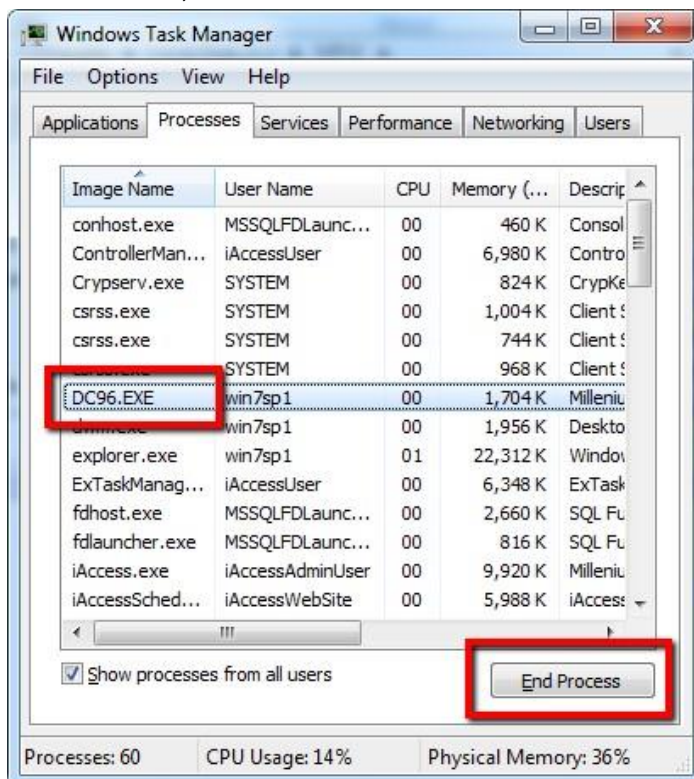


Windows will then ask you:

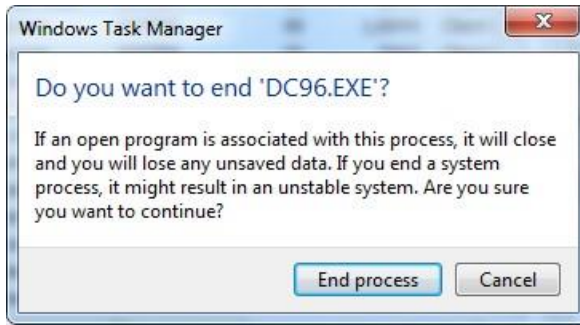 

Click 'End Process' button to confirm.

 
3. Go to the folder where Millennium is installed, typically it is found under 'C:\MPW'. Find the file 'DC96.INI' and open it for editing.

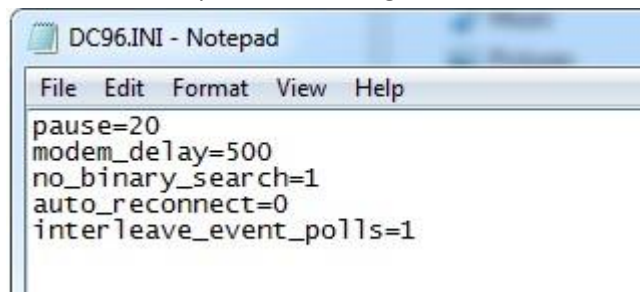

4. Insert the following string at the end of the file:

period_reload_time_min=45

 The value after equal sign, is the time period in minutes after which the time will be downloaded. So in the following example, time will be downloaded every 45 minutes. You can set a desired value.

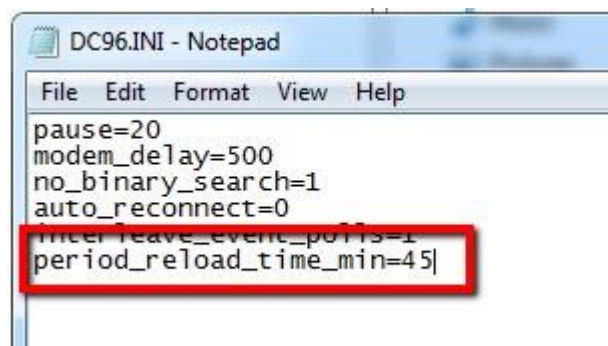

Note: This string of code must follow last string the file. All the characters must be lower case, without any spaces before and after the equal sign.

5. Save the changes.
6. Start the Millennium program. If you are running Millennium as an application then just start the program. If you are running Millennium as service then go to **Start -> Control Panel -> Administrative Tools -> Services**. Find the Millennium service and **right click -> Start**.